


### **Power On:**

1. Turn on the main power switch **G\***
2. Power on the PC **F**
3. Point the remote at the projector and press on **C**.
4. Power on the amplifier **I\***
5. Lower the screen

### **Power Off:**

1. Shut Down the PC **F**, VCR/DVD **H**, and Document Camera **E** as needed
2. Point the remote control at the projector, press **C** and turn it off.
3. Power off the amplifier **I\***
4. Raise the screen
5. Turn off the main power switch **G\***

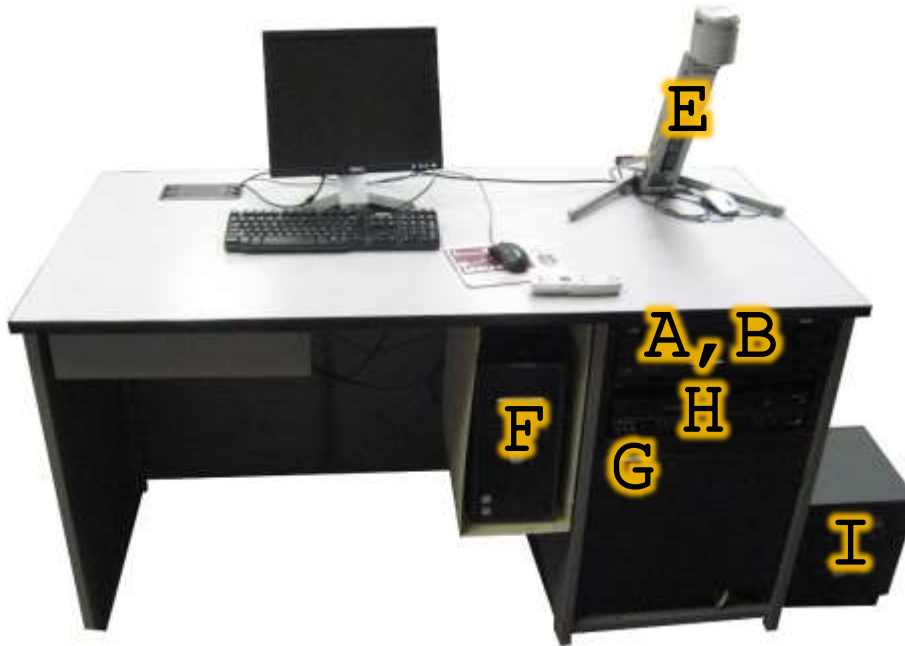

\* Equipment and appearance will vary from room to room. For the most success, familiarize yourself with your mediated classroom prior to presenting in front of a live audience.

### **Input Selection**

1. Ensure the device you wish to use (**E, F, H**) is powered on.

2a (Room has a receiver **A**):  
Press the input button **B** on the receiver **A** which matches the device you wish to use.

2b (Without a receiver **A**):  
Point the remote at the projector and press “search” **D** until the desired device output is displayed on the screen

Generally Inputs will be connected as follows:

- PC ..... VGA1
- Laptop ..... VGA2
- DVD/VCR .....Video 1/2
- Document Cam ..... Video

Building: \_\_\_\_\_ Room: \_\_\_\_\_

This room has:

- A, B,** ..... Home Theatre Receiver
- C, D,** ..... Projector Remote Control
- E,** ..... Document Camera
- F,** ..... Desktop Personal Computer
- G,** ..... Main Power Switch
- H,** ..... DVD
- H,** ..... VCR
- I,** ..... Room Sound System Amplifier

For Technical Assistance Or Training

Contact IT Between 8:00 AM And 5:00 PM Monday – Friday

406-265-3765

helpdesk@msun.edu

Cowan Hall 117B