
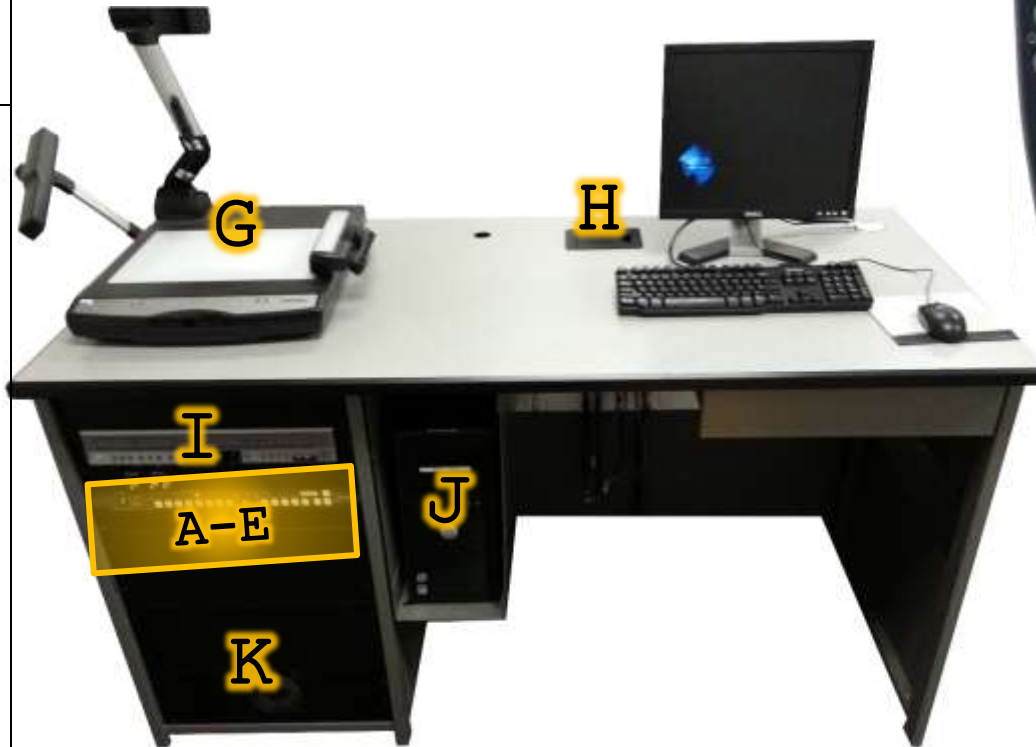


Power On:

- 1: Turn on the kramer power switch **A**
- 2: Point the remote at the projector and press power. **F**
- 4: Turn on the Amplifier **K** (if needed)
- 5: Power on the PC **J**
- 6: Lower the screen using the switch on the wall

Power Off:

- 1: Shut Down the PC **J**
- 2: Point the remote control at the projector and power down the projector **F**
- 3: Raise the screen using switch on the wall
- 4: Turn Off the Kramer power switch **A**

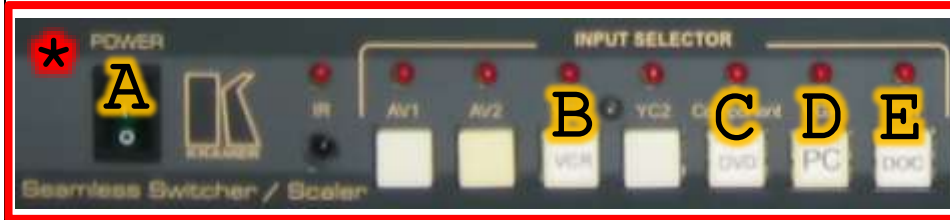

Input Selection

PC:

- 1: Power on the PC **J**
- 2: Press "PC" **D**

DVD/VCR:

- 1: Power on the DVD/VCR Player **I**
- 2: Press "DVD" **C** or "VCR" **B**

Document Camera:

- 1: Power on the Document Camera **G**
- 2: Press "DOC" **E** on the Kramer

Laptop:*

- 1: Connect the laptop using the cables provided **H** (if available)
- 2: Press "LAPTOP" on the Kramer
- 3: Power on the laptop
- 4: Use your laptop's function keys to ensure it is sending signal to the podium.

* Location and availability of input selection buttons may vary.

For the most success, familiarize yourself with your mediated classroom prior to presenting in front of a live audience.

Building: _____ Room: _____

This room has:

- A - E**,Kramer Switcher/Scaler
- F**, Projector Remote Control
- G**,Document Camera
- H**, Laptop Connection Cables
- I**,DVD
- I**, VCR
- J**,Desktop Personal Computer
- K**, Room Sound System Amplifier

For Technical Assistance Or Training

Contact IT Between 8:00 AM And 5:00 PM Monday – Friday

406-265-3765

helpdesk@msun.edu

Cowan Hall 117B